

## OT Buttons combinations

### Evolutions

13-01-2013 - V1 - Little updates and MIDI SEQUENCER table completed.

10-01-2013 - V0 - First version.

Conventions	Comment
	<b>Keys</b>
<b>[Rectangular keys]</b>	[CUE], [PATTERN]
<b>[F]</b>	Abbreviation for [FUNCTION]
<b>►Validation keys◄</b>	►ENTER◄ or ►YES◄, ►EXIT◄ or ►NO◄
<b>•Knob•</b>	•Level•, •DATA ENTRY•, •A•, •B•, ..., •E•
<b>&lt;A numbered key&gt;</b>	any <TRIG>, <TRACK>, <SCENE> key
<b>&lt;TPP&gt;</b>	A track parameter page key
<b>↔↑↓</b>	Arrow keys
<b>(Other rounded keys)</b>	(MIXER), (Tempo). (TRIG 13) means the unique 13th trig key
	<b>Other</b>
<b>Red label</b>	When Function is held, the following key is showned with its red label : <b>[F] + [COPY]</b>
	Or
⓪	Hold the button
⓪ +	Press the button
<b>[●]</b>	In the third column, means that grid recording mode on

	GENERAL
►EXIT◀	Close a window
[CUE] + (Tempo)	Toggle metronome on / off
	<b>Parameter editing</b>
⏸ + ●DATA ENTRY●	Adjust the value in increments of 7
[F] + ●DATA ENTRY●	Jump to relevant position (eg. : min, max, middle,...)
[F] + ↑   ↓	Quick scrolling (one page up / down)
	<b>Naming menu</b>
← →	Navigate left / right between the letters
●Level●   ↑   ↓	Select the letter
[F] + ►NO◀	Quickly erase characters
[F]	Open a popup displaying the letters

	PROJECT
[F] + ( <b>PROJECT</b> )	<b>Open Project Menu</b>
[F] + [ <b>EDIT</b> ]	Rename/delete projects in the CHANGE menu
( <b>MIXER</b> )	<b>Open Mixer Menu</b>
<TRIG>	Mute Audio Track (1-8), Midi Track (9-16)
⏸ [F] + <TRIG>	Mute changes are held until [F] is released
[CUE] + <TRIG>	Solo Audio Track (1-8), Midi Track (9-16)
(Tempo)	<b>Open Tempo Menu</b>
●Level●	Change the current tempo in integer steps
↑ ↓	Change the decimal part of the tempo
⏸ [F] + ●Level●	Will not change the tempo until [F] is released
[F] + ( <b>Tap Tempo</b> )	4 taps minimum
← →	<i>Temporarily</i> shift the tempo up/down by 10%
<TRACKs> + ← →	<i>Temporarily</i> nudge the tempo of the selected <TRACKs>

TRACK RECORDERS AND PICKUP MACHINES		
[F] + (SETUP AB)	Open recorder setup menu page 1	
[F] + (SETUP CD)	Open recorder setup menu page 2	
[F] + [▶]	Clear the recorder buffer	NOT [●]
[F] + [EDIT]	Recorder popup menu	
<TRACK> + [EDIT]	Open the sample in the sample editor	
<RECORD> + [EDIT]	Open the recorder buffer of the active track in the sample editor	
<b>Recorder trig sampling</b>		
<TRIG>	Place a recording trig	[●]
[F] + <TRIG>	Place a one shot recording trig	[●]
<TRIG> + (RECORD AB)   (RECORD CD)   (MIDI)	Activate sampling source	
<b>Manual sampling</b>		
<TRACK> + (RECORD AB)	Sample from input AB	
<TRACK> + (RECORD CD)	Sample from input CD	
<TRACK> + (MIDI)	Sample from internal source	
<i>Personalize / Quick Mode recording allow to sample without needing to press &lt;TRACK&gt;</i>		
<b>Pickup Machine sampling</b>		
(RECORD AB)	Control the record function : Start new loop recording / toggle between overdubbing and replacing	
(RECORD CD)	Control the play function : Stop overdubbing or replacing	
<TRACK> + (TEMPO)	Sync the sequencer to a PICKUP machine loop	
<SETUP> + [EDIT]	Open the recorder buffer in the sample editor	

BANKS, PARTS AND SCENES	
[F] + (PART)	Part quick select menu
← → ↑ ↓	Select part
[F] + [EDIT]	Part Edit popup menu
[F] + [RELOAD]	Revert the part to its previously saved state
[F] + [COPY]   [CLEAR]   [PASTE]	Copy / clear / paste parts
<b>Scenes</b>	
<SCENE> + <TRIG>	Associate the <TRIG>th scene to the chosen <SCENE>
<SCENE> + ●DATA ENTRY●	Lock the parameter controlled by the knob to the scene
<SCENE> + U ●DATA ENTRY●	Remove a scene lock
<SCENE>	Display scene lock on the <TRIG> leds : - <b>Red</b> : scene number assigned to this <SCENE> - <b>Green</b> : scene number assigned to the other <SCENE> - <b>Half-bright green</b> : parameter locks
U <SCENE>	Display scene lock for the tracks with <b>Half-bright green, maybe blinking</b> leds.
U <SCENE> + <TRACK>	Display scene lock for the parameter pages with <b>Half-bright green, maybe blinking</b> leds.
[F] + <SCENE MUTE>	Mute the chosen <SCENE>.

<SCENE> + [COPY]   [CLEAR]   [PASTE]	Copy / Clear / Paste scenes. <SCENE> + [CLEAR] a second time undo the clearing.
--------------------------------------	------------------------------------------------------------------------------------

	TRACKS
	<b>Assign machines and samples</b>
<TRACK> + <TRACK>	Open quick assign menu for the track
(PLAYBACK)	Open playback menu
[F] + [EDIT]	Edit the sample in the audio editor ( <i>from Quick assign or playback menu</i> )
<TRACK> + [EDIT]	Open the sample in the sample editor
[F] + ►YES◄	Preview audio file on main outputs
[CUE] + ►YES◄	Preview audio file on cue outputs
[F] + ◀   ▶	Load the previous   Next sample in the slot
	<b>Track parameter pages</b>
<TPP>	Open the corresponding MAIN track parameter page
[F] + <TPP> <TPP> + <TPP>	Open the corresponding SETUP track parameter page
	<b>Levels</b>
•Level•	Adjust track main output level (post effects)
[CUE] + •Level•	Adjust track cue output level
[F] + •Level•	Adjust the main level of the MIXER menu
	<b>Routing</b>
<TRACK>	Select a track
[F] + <TRACK MUTE>	Mute the track
[CUE] + <TRACK>	Send the track to the cue output (toggle)
[CUE] + (RECORD AB)	Route AB to the cue output
[CUE] + (RECORD CD)	Route CD to the cue output
	<b>LFO Designer</b>
<TRIG> + • A •   • B •   • C •	Change values for LFO Designer steps : <TRIG> choose the step, the upper DATA ENTRY defines the value : B = current value, A = previous step, C = next step. Many TRIG can be pressed at the same time.
<TRIG> + (Tempo)	Interpolate value between current step and next step
[F] + [EDIT]	Popup menu : randomize, invert
[F] + ◀   ▶	Rotate the sequence
[F] + [COPY]   [CLEAR]   [PASTE]	To copy LFO waveforms <i>between tracks</i>

PATTERNS		
	<b>Select pattern</b>	
[PATTERN] + <TRIG>	Select a pattern in the current bank	
[BANK] + <TRIG>...	Select a bank...	
... + <TRIG>	... then a pattern in the bank	
	<b>Pattern control</b>	
[▶]	Start playback of a pattern	
[■]	Stop the playback of all tracks except those containing THRU machines. Effects like Echo Freeze Delay will continue until fade out	
[■] + [■]	Stop all tracks containing THRU machines and kill Echo Freeze Delay	
[▶] <i>while playing</i>	Pause the playback	
[▶] <i>again</i>	Resume playback	
	<b>Pattern chaining</b>	
⌚ [PATTERN] + <TRIGs>	Loop the sequence of selected patterns	
[■]	Stop playback and reset the pattern chain	
[▶]	Then the pattern chain will start playing from the beginning	
[■] + [■]	Reset the pattern chain	
	<b>Sample locks</b>	
<TRIG> + ↑ ↓ <TRIG> + ●Level●	Open sample lock menu. Use Arrows or Level knob to navigate in the list	<i>Rapidly flashing red led</i>
[F] + [EDIT]	Open track trig edit menu	[●]
[SCALE SETUP]	Navigate through the pages	
[F] + [EDIT]	Open pattern settings menu	NOT [●]

PATTERNS : RECORDING MODES	
[●]	<b>Grid recording mode (toggle)</b>
[F] + ←   →	Shift the trigs backwards / forwards
[SCALE SETUP]	Navigate between pattern pages
[●] + [▶]	<b>Live recording mode</b>
<TRIG 9-16>	Input sample trig on tracks 1-8
[F] + <TRIG 9-16>	Input trigless trig
●DATA ENTRY●	Input parameter locks to the active track
▶NO◀ + <TRACK>	Erase trigs in real time. Several tracks can be erased simultaneously
[F] + ▶NO◀	Remove parameter locks in real time
▶NO◀ + ●Level●	Remove all sample locks in real time
▶NO◀ + ●DATA ENTRY●	Remove specific parameter lock corresponding to the knob
[■]	Stop both the recording and the playback of the sequencer
[▶]	Exit live recording and kee the sequencer playing the pattern

PATTERNS : TRIG TYPES		
<TRIG>	Place a <b>sample trig</b> (toggle)	<i>Red led</i>
[F] + <TRIG>	Place a <b>trigless lock</b>	<i>Half-bright green led</i>
<TRIG> + ►NO◄ <i>twice</i>	Turn a sample trig to a trigless lock	
<TRIG> (trigless lock / trig)	Turn a trigless lock or trigless trig to a sample trig	
⏏ <TRIG> + ◀   ▶	<b>Open micro timing menu</b>	
↑ ↓	Adjust the trig count	
◀ ▶	Adjust the trig offset (grid resolution : 1/384)	
	<b>Trigless trigs</b>	<i>Green full-bright led</i>
<TRIG> + ►YES◄	Turn a trigless lock to a trigless trig	
<TRIG> + ►NO◄	Turn a sample lock to a trigless trig	
	<b>One shot trigs</b>	<i>Yellow led</i>
[F] + <TRIG> (sample trig)	Turn the sample trig to a one shot trig	
[■] + [■]	Re-arm the one shot trigs (while sequencer is stopped)	
►ENTER◄	Re-arm the one shot trigs in RECORDING SETUP and TRACK TRIG EDIT menus	
<TRACK> + ►ENTER◄	Re-arm all one shot recorder trigs of a track	
<TRACK> + ►EXIT◄	Disarm all one shot recorder trigs of a track	
►ENTER◄   [F] + ►ENTER◄	Re-arm all one shot recorder trigs of the active track	
►EXIT◄   [F] + ►EXIT◄	Disarm all one shot recorder trigs of the active track	
►ENTER◄   [F] + ►ENTER◄	Re-arm all one shot recorder trigs of all tracks	NOT 
►EXIT◄   [F] + ►EXIT◄	Disarm all one shot recorder trigs of all tracks	NOT 
<i>In track trig edit menu</i>	<b>Swing and slide trigs</b>	<i>Green led</i>

PATTERNS : TRIG MODES	
[F] + ↑ ↓	Open trig mode menu NOT [●] AND NOT [●] + [▶]
<b>Track Mode (default)</b>	
<TRIG 1-8>	Trig any disconnected audio track
<TRIG 9-16> <TRACK> + [▶]	Trig the machines of the eight tracks Required t least one time for a THRU machine to play
<TRACK> + [■]	Stop the playback of the machines
[F] + <TRIG 9-16>	Trig manually the trigless trigs of the track
<b>Chromatic Mode : Chromatic playback of samples</b>	
<TRIGS 1-16> and [SCALE SETUP]	Represent a mini keyboard - C key : yellow led - White key : red led - Black keys : unlit led
(TRIG 13)	<b>Root note</b>
<TRIG>	Trig a sample
[F] + <TRIG>	Trig a trigless trig
[F] + ←   →	Change octave range
<b>Slot Mode : Playback the flex and static sample slot lists</b>	
<TRIG>	Trig a sample
[SCALE SETUP]	Move between the rows
<b>Slice mode : Play the individual slices</b>	
<TRIG>	Trig a slice
[SCALE SETUP]	Move between the rows
<b>Quick mute Mode : Same as mute settings in MIXER menu</b>	
<TRIG>	Mute Audio Track (1-8), Midi Track (9-16)
<b>Delay control Mode : Parameters of Echo Freeze Delay</b>	
⓪ <TRIG 9-16s>	Select the tracks (many trigs can be pressed)
<TRIG 1-8>	Adjust the time value of the selected delays
[SCALE SETUP]	Change the scale of values for <TRIG 1-8> (1:2 or 1:3)

SEQUENCER COPY, PASTE AND CLEAR OPERATIONS		
[BANK] [PATTERN] [TRIG] <TRACK>	Patterns : select the pattern Tracks : select the track	NOT [●] [●]
[F] + [COPY]   [CLEAR]   [PASTE]	Pattern or track operations	
[F] + [PASTE]	Undo the paste operation	after [F] + [PASTE]
[F] + [CLEAR]	Undo the clear operation	after [F] + [CLEAR]
<TRACK> + [SCALE SETUP]	Track page : select the page of sequencer steps	
[SCALE SETUP] + [COPY]   [CLEAR]   [PASTE]	Track page operations	
[SCALE SETUP] + [PASTE]	Undo the paste operation	after [SCALE SETUP] + [PASTE]
[SCALE SETUP] + [CLEAR]	Undo the clear operation	after [SCALE SETUP] + [CLEAR]
<TRACK> + <TPP>	Track parameter page (both main and setup)	
<TPP> + [COPY]   [CLEAR]   [PASTE]	Track parameter page operations	
<TPP> + [PASTE]	Undo the paste operation	after <TPP> + [PASTE]
<TPP> + [CLEAR]	Undo the clear operation	after <TPP> + [CLEAR]
	<b>Trigs</b>	[●]
⓪ <TRIG> + [COPY]   [CLEAR]   [PASTE]	Trig operations	
⓪ <TRIG> + [CLEAR]	Clear all trig locks of the track	
⓪ <TRIG> + [PASTE]	Undo the paste operation	after ⓪ <TRIG> + [PASTE]
⓪ <TRIG> + [CLEAR]	Undo the clear operation	after ⓪ <TRIG> + [CLEAR]

	AUDIO EDITOR
	<b>Opening the audio editor...</b>
[F] + [EDIT]	... from Quick assign or playback setup menu
<TRACK> + [EDIT]	... from the machine of the track
<RECORD> + [EDIT]	... from the track recorder for the recorder buffers 1-8
(PLAYBACK)	<b>Trim menu</b>
•Level•   ←   →	Navigate in the waveform
•A• •B• •C•	Set start / loop / end points of the sample
[F] + •A• •B• •C•	Move points to snap zero crossings
•D•	Zoom on the Y axis
•E•	Scroll the waveform
•F•	Zoom on the X axis
↑ ↓	Zoom in / Zoom out
[F] + ►YES◀	Preview sample from the main outputs
[CUE] + ►YES◀	Preview sample from the cue outputs
[F] + [EDIT]   ►YES◀	Open trim edit menu
(AMP)	<b>Slice menu</b>
[F] + [EDIT]   ►YES◀	Open slice edit menu
•A• •B• •C•	Set start / loop / end points of the slice
[F] + •A• •B• •C•	Move points to snap zero crossings
(LFO)	<b>Edit menu</b>
•A• •C•	Select the section of audio file to edit
[F] + •A• •C•	Select using zero-crossing points
[F] + [COPY]	Copy the selection
[F] + [PASTE]	Paste the selection at position of •A• point.
(Effect 1)	Open attributes menu
(Effect 2)	Open file menu

	ARRANGER MENU
[F] + [ARRANGER]	Enter arrangement mode
[▶▶]	Play the arrangement
↑ ↓	Navigate through the rows of the arrangement
▶YES◀	Play the new selected row after the currently playing row has finished playing
[■]	Stop the playback
[■] again	Move the position pointer to the beginning of the arrangement
[F] + [EDIT]	Open arranger menu
[F] + ↓	Insert an arrangement row
[F] + ↑	Remove an arrangement row
← →	Move the focus between the columns
	<b>Pat column (patterns)</b>
•Level• [BANK]/[PATTERN] + <TRIG>	Select the pattern to play
•Level• anti-clockwise : HALT	HALT is located before pattern A01
•Level• anti-clockwise : LOOP	Once HALT is selected, it can be changed to LOOP...
•Level• anti-clockwise	...then Level knob sets the number of loop cycles
•Level• clockwise : JUMP	Once HALT is selected, it can be changed to JUMP...
•Level• clockwise	...then Level knob sets the row number to jump to
•Level• anti-clockwise : REM	Once HALT is selected, it can be changed to REM...
→ + ▶YES◀	... then open naming menu for the remark
	<b>Rep column &lt;repeats&gt;</b>
•Level•	Alter the number of repeats
	<b>LN column (length)</b>
•Level•	Alter the pattern length setting
	<b>Scene column</b>
•Level• <SCENE> + <TRIG>	Assign the scenes
	<b>T column (transpose)</b>
▶YES◀	Open the MIDI TRANSPOSE window
	<b>B column (individual BPM settings)</b>
▶YES◀	Open the ROW TEMPO window
	<b>M column (mute settings)</b>
▶YES◀	Open the ROW MUTE window
<TRIG 1-8>	Mute audio tracks
<TRIG 9-16>	Mute midi tracks

MIDI SEQUENCER	
[MIDI]	<b>Enter MIDI mode</b>
<TRIG 1-8> <TRIG 9-16>	Trig AUDIO track Trig MIDI track
	NOT [●] AND NOT [●] + [▶]
[■] [■] + [■] [●] + [▶] ⓪ <TRIG> + <i>note data or CC</i>	Send a NOTE OFF fro any MIDI notes still playing Send ALL NOTES OFF, resend CC and PC Record MIDI data (note and CC) Add MIDI notes and MIDI Parameter locks on a per trig basis
<b>MIDI Track parameter pages</b>	
<TPP>	Open the corresponding MAIN track parameter page
[F] + <TPP> <TPP> + <TPP>	Open the corresponding SETUP track parameter page
<b>Note Main</b>	
⓪ <TRIG>	Display a mini keyboard in the lower part of LCD screen
⓪ <TRIG> + ●A●	Visualize the root note on the keyboard
<b>Note Setup</b>	
●DATA ENTRY●   ▶YES◀	Activate parameter change
<b>Arpeggiator Setup</b>	
<i>lit</i> <TRIG> <i>leds</i>	Reflect the length of the arpeggio
●C●	Set the length of the arpeggio
<TRIG>	Deactivate arpeggiator step
	<i>Green led : activated step Red led : deactivated step</i>
<TRIGs> + ●Level●   ↑ ↓	Adjust note offset values
●F●	Set the key scale
[F] + ← →	Rotate the arpeggio sequence
<b>Ctrl1 Main - Ctrl 2 Main</b>	
[F] + ●DATA ENTRY●	Enable the parameters (toggle)
●DATA ENTRY●	Set paramater value